

UK Clippasafe 30 piece Home Safety Starter Pack

Before using any of the items in this pack, please read these instructions carefully, and keep them for future reference.

Socket Covers

Fit to all exposed plug sockets to help prevent children from inserting fingers or other items.

The special design of these covers enables them to be removed with the plug you need to use, which means no more broken fingernails!

Appropriate socket covers for country of sale are enclosed:

UK & EI – Simply insert the earth pin into slot and pull to extract socket cover (Fig. 1).

EU – Simply insert plug into slots, rotate plug until pins bind in the slots, then pull to extract socket cover (Fig. 2).

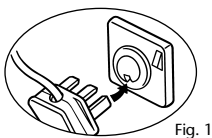


Fig. 1

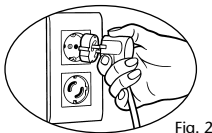


Fig. 2

Corner Cushions

Big and extra soft to help provide maximum protection for young children during their early walking stage. They are ideal for cushioning the sharp corners of tables, shelves and hearths, which toddlers can so easily bump into.

1. Wash Corner Cushions in warm soapy water and dry well before using.
2. Clean off any wax, polish or oil from the furniture corners before applying Corner Cushions.
3. Peel off backing paper from one side of enclosed double sided tape and apply to all three inside surfaces of the Corner Cushion.

4. Remove remaining backing paper from the tape and press the Corner Cushion firmly onto the furniture corner (Fig. 3). For additional strength, these Corner Cushions can be screwed or glued to the furniture.

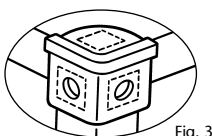


Fig. 3

Cupboard/Drawer Locks

Easy to fit to help prevent children from opening drawers and cupboards.

1. Screw the catch to the underside of the front cabinet frame, 2.5cm from the side (Fig. 4). If fitting to a cupboard, the catch can alternatively be fitted to the inside wall.

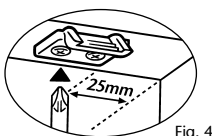


Fig. 4

2. Hold the base of the hook firmly to the inside of the drawer or cupboard door, and position to engage with the middle of the catch (Fig. 5). Mark the centre position of the screw holes.

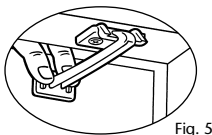


Fig. 5

3. Securely mount the hook using the screws provided.
4. Check operation and adjust position of the hook and/or catch if necessary. (Fig. 6).

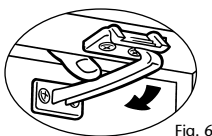


Fig. 6

Easy to use – Pull open the drawer or door slightly. Press down on the hook to open (Fig. 6). Locks automatically when drawer or door is closed.

Multi-Purpose Latch

The Clippasafe Multi-Purpose Latch is easily fitted to help prevent children from opening cupboards, drawers, fridges, freezers, cabinets and chests.

Perfect for use on any furniture which has a curved or irregular surface, or which opens and closes at the corner. Can be fitted to wood, glass, metal, plastic, laminated or timber veneer surfaces.

1. Locate the best position to fit the latch, preferably high up, out of your child's reach.

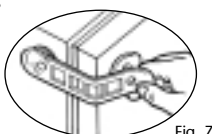


Fig. 7

2. Thoroughly clean and dry the surface of the cupboard, cabinet, fridge etc. where the latch is to be fitted. Ensure that no grease, wax, polish or other oily residue remains, otherwise the adhesive will not stick.

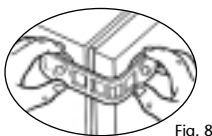


Fig. 8

3. Keeping the three parts of the latch locked together, remove the

protective paper from one of the adhesive backed discs. Press disc firmly into place.

4. Ensuring that the flexible strap is neither loose nor tight, position the second disc, remove the protective paper, and press firmly into place (Fig. 7).

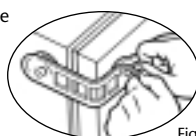


Fig. 9

5. Full adhesion is achieved by leaving the adhesive to set for several hours.

If possible fit in the evening and then leave undisturbed overnight.

To open - Whilst pressing the base of the disc against the cabinet with your thumb, gently pull the strap off the disc with your other hand (Fig. 8).

To close - Press the strap back onto the disc, ensuring that it engages properly (Fig. 9).

If you wish to relocate the Multi-Purpose Latch, replace the adhesive pads with strong double sided tape. This latch must not be used on appliances which generate heat.

Door Stopper

Helps to avoid pinched and trapped fingers from slamming doors. Can also prevent children accidentally locking themselves into a room.

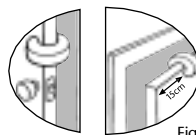


Fig. 10

To Use: Simply fit to the top or outer edge of door, above your child's reach. Do not fit within 15cm of top corner (Fig. 10).

CAUTION: regularly check Door Stopper for wear and ensure that it is positioned correctly on door at all times.

Fridge/Freezer Lock

Helps to prevent children from opening fridges and freezers.

1. Choose the best position to fit the Fridge Lock, preferably as high up as possible. Thoroughly clean and dry the surfaces of the appliance where the latch and catch are to be fitted, ensuring that no residue remains.

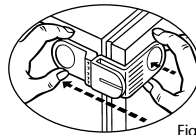


Fig. 11

2. Connect latch (A) and side catch (B) together. Remove backing paper from adhesive pad on latch (A).

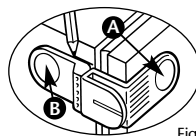


Fig. 12

3. Whilst holding side catch (B) against surface of appliance and keeping the lock square to the corner of appliance, slide lock backwards until adhesive pad on latch adheres to door front (Fig. 11). Press hard to ensure good adhesion.
4. Carefully mark the position of side catch (B) on the side of the appliance (Fig. 12).

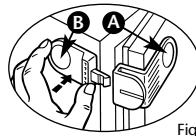


Fig. 13

5. Release side catch (B) from latch and remove adhesive backing paper.

6. Open appliance door and press catch onto side of appliance in position marked (Fig. 13).

To unlock – move latch lever away from appliance and pull door to open.

To lock – press on ribbed area of latch (A) until side catch clicks in place. This system allows you to leave the fridge or freezer unlocked during busy periods.

Toilet Seat Lock

Easy to fit and will keep the seat lid securely locked down until it is released by an adult.

1. Thoroughly clean and dry the toilet bowl and seat lid ensuring that no grease, wax, polish or residue remain.
2. Remove the protective paper from the clip end of the lock, and press firmly onto the front of the toilet bowl, just under the seat.

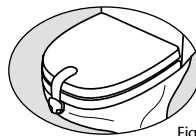


Fig. 14

3. Remove the protective paper from the strap end of the lock, and with the seat lid closed, press firmly onto the lid, ensuring that the strap is taut (Fig. 14).

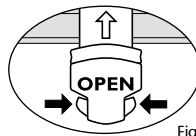


Fig. 15

To open – press on both locking levers and withdraw clip (Fig. 15).

WARNING: Some furniture finishes particularly wood, may be affected by the application of adhesive tapes or pads.

CAUTION: There is no substitute for proper adult supervision. These products are only a deterrent – discontinue use when child is able to remove, operate or open them. Never leave your child unattended.

Clippasafe Ltd. accepts no responsibility for any loss or damage suffered by any person or property as a result of the incorrect fitting or misuse of this product.