


Buddy Board

Instructions - Read carefully and keep for future reference.
Your child's safety may be affected if you do not follow these instructions

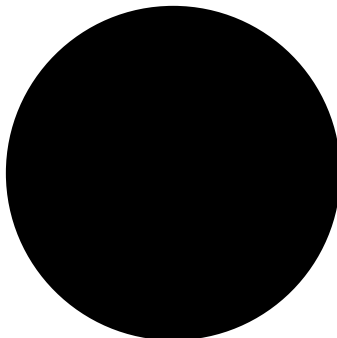



Warning! Read the instructions before use and keep it for future reference.



Safety of your child is your responsibility!

PARTS Pic. 1- CHECK BEFORE ASSEMBLY


1. Buddy Board platform x1
2. Arm support, left x1
2. Arm support, right x1
3. Wheels x2
4. Connector, left x1
4. Connector, right x1

ASSEMBLY


1. Place the Buddy Board platform upside down on a sturdy surface.
2. To attach the wheels, align the wheels to the wheel housing. Pic. 2 Then push the wheels firmly into the housing unit until you hear "click". Pic. 3

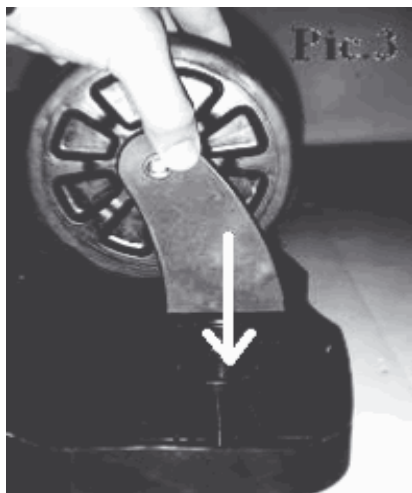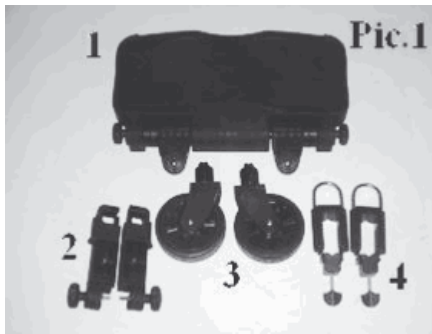


3. Assemble the support arms on the platform (1)(2) Pic. 4, and fix it with the swivel button until they are fully engaged **Pic.**

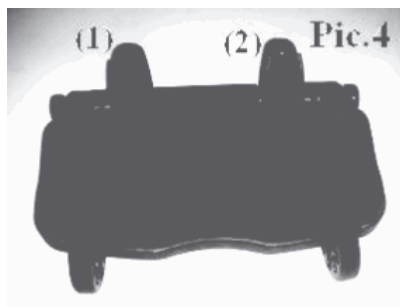

4.To attach the connector on to the pushchair, press the adjuster plastic part (1) and release the connector Pic.7

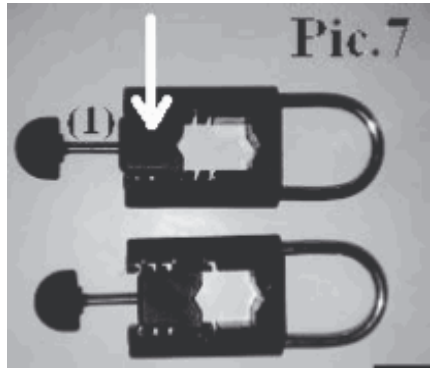

5. Place the connector on the rear leg of the pushchair and ensure that the tube protector is in the right position around the rear leg of the pushchair.Pic.8. Then put the two arm supports on the connector Pic.9.

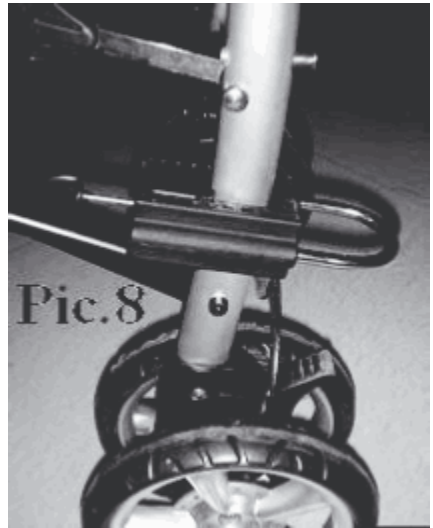

Warning! Avoid over-tightening since it may affect the tube and



6. Ensure that both connectors are at the same level. Adjust the running board platform parallel to the ground Pic.10.



Then secure the arms to the board by tightening the locks(1)(2) Pic.11 at two sides of running board.Pic.12




Warning! Always ensure that the Buddy Board is parallel to the ground.

Not doing so may affect the stability.



7. This Buddy Board is suitable for most of the umbrella fold and A-fold pushchairs with a more upright rear legs. Pic.13 & 14


Warning! This Buddy Board is not suitable for the pushchairs without rear legs.

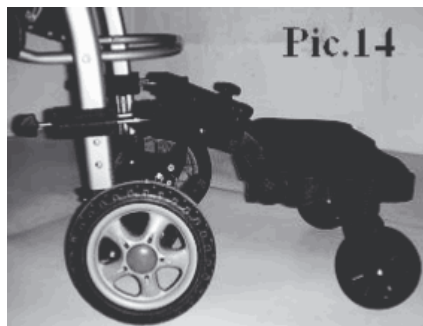

8. Depending on the width of your pushchair, you may need to readjust the arms. First, undo the swivel buttons Pic.6



Then adjust the direction of the arms. Ensure both arms are evenly extended to the same length. Pic.15 & 16

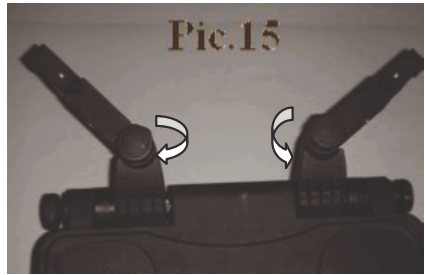

9. If the arm support is too short to hook the connector, you can adjust the length by fixing the screw into the second hole (1) Pic.17 and Pic.18



10. If you face any difficulty when applying the brakes on your pushchair, either:

a) Remove the Buddy Board by pressing the button, then engage the brakes. Pic.19

b) Tilt the Buddy Board upwards then engage the brakes.



WARNINGS

Warning! Intended for use by children from 2 years old up to 20kg weight.

Warning! Never leave your child unattended.

Warning! When going up or down steps, kerbs, stairs or escalators, ensure the child is not on the running board.

Warning! This product is not suitable for twin and tandem type pushchairs.

Warning! Always keep your hands on the pushchair when your child is standing on the platform.

Warning! Make sure your child is standing with both feet on the board before pushing the pushchair.

Warning! Check all connectors, arms and the wheels of the Buddy Board as well as the pushchair before using it.

Warning! Always ensure that all connectors and locking mechanisms are tightened prior to use.

Warning! Do not use this Buddy Board if any parts are broken or missing or worn.

Warning! Never let children play with the Buddy Board. When it is not in use, store away from children's access.

Warning! Always disconnect your Buddy Board before folding your pushchair. In some pushchair models you may need to disassemble the connectors as well.

CLEANING AND MAINTENANCE

Regularly inspect all locking devices and connectors before using the Buddy Board.

If you have any difficulty with the wheels, ensure that dirt is not the cause.

Use a spray lubricant for the wheels.

Sponge clean with warm water and mild detergent.


Always allow to dry or use a cloth to dry before using or storing.



Kiddicare.com, Club Way, Cygnet Park, Hampton,
Peterborough, Cambs, PE7 8JA Tel: 01733 201873

FOR ATTACHMENT TO THE AXEL:
UNSCREW THE END SECTION OF THE ATTACHMENT ARMS AND
RE-ATTACH THEM UPSIDE DOWN.

ENSURE BOARD IS LEVEL USING SIDE ADJUSTERS.

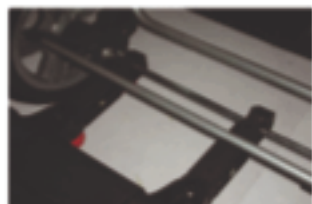

FOR ATTACHMENT TO A SUITABLE HORIZONTAL CROSS-MEMBER:
CLIP ATTACHMENT ARMS ONTO CROSS MEMBER.

ENSURE BOARD IS LEVEL USING SIDE ADJUSTERS

